


**Part Number: NT17-0519-C06**

*Description:* N Type Crimp Right Angle Plug, Nickel Plated  
*To suit cable types:* LBC400, LBC400 ExtraFlex, LBC400 LSZH, RA519

*Strip Dimensions*  
 A=10mm, B=5mm, C=5mm

*Cable Preparation*




■ Assembly Instructions


1) Slide the ferrule onto the cable and strip the cable to the dimensions as shown, taking care not to nick the centre conductor or braid.



2) Insert the cable into the body, ensuring that the cable braid is on the outside of the connector mandril and that the centre core locates in the internal mounting post. Slide the ferrule forward and crimp.

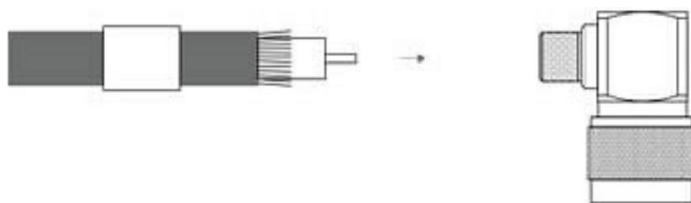

3) Solder the centre core of the cable to the mounting post and screw in the end cap.

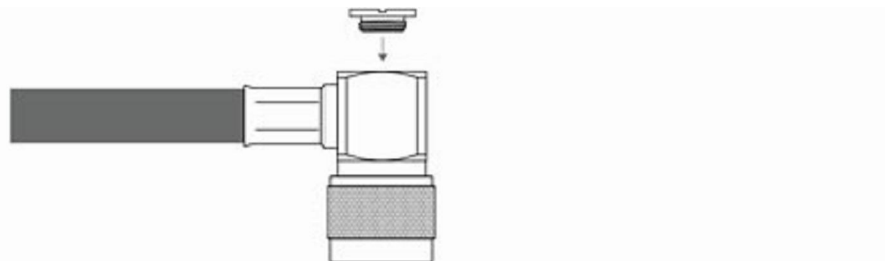

*Recommended Crimp Tool(s):* GCT-0213 GCT-0519  
*Crimp Hex. Sizes:* 10.90mm Hex., Solder centre core